



DuraSafe Wheel Lock

INSTRUCTIONS:



- 1.) Secure bracket under tire lug nut. Bracket can remain attached to wheel when lock is not in use.



- 2.) Place chain plate with anti-tampering offset over lock shaft, being sure to cover wheel nut.



- 3.) Wrap chain around stationary part of vehicle (frame, suspension, etc.) and place second chain plate over lock.



- 4.) Place lock head over shaft, secure, and place dust cover over lock head.

NOTE: Do not attempt to operate vehicle while lock is in place. May cause personal injury.