




T-Rex[®] Transom Saver with Prop Lock - Installation Instructions -

- 1) Determine mounting application - either roller style or bolt on, and attach correct end piece.
- 2) Trim the motor to the desired position for trailering and determine length for transom saver.
- 3) Adjust the length of the transom saver by telescoping the unit to the desired length. Add extension piece if necessary and tighten all bolts.
- 4) Place transom saver on trailer roller or bolt on bracket and trim engine down until snug. **CAUTION: Over trimming could result in damage to lower unit or transom saver.**
- 5) Secure rubber strap on the transom saver wrapping it around the lower unit.
- 6) Insert the grooves of the prop lock bar into locking mechanism until vinyl coated hook slides into the prop's cavity as far as it will travel.
- 7) Turn key to lock. Pull up on prop bar to be sure it is locked.

Note: Key will not remove until in the locked position.

- 8) Remove key and cover with rubber cap.
- 9) ALWAYS REMOVE PROP LOCK AND TRANSMOM SAVER BEFORE USING THE MOTOR.

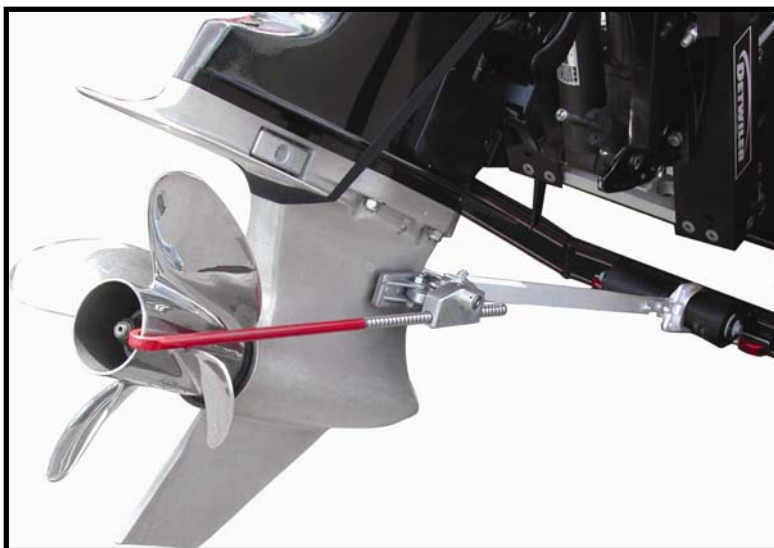

**1 Year Limited
Warranty**

Lubricate Lock Often

**Record key number
for replacement keys
if lost.**